Quick Start Guide
TX-SR313

Supplied Accessories

Make sure you have the following accessories:

① **Indoor FM antenna**
② **AM loop antenna**
③ **Speaker cable labels**
④ **Remote controller and two batteries (AA/R6)**
⑤ **Power cord (Taiwanese models)**
(Plug type varies from country to country.)

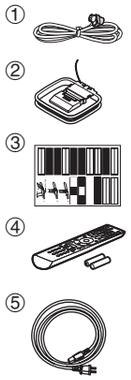

Using the Remote Controller

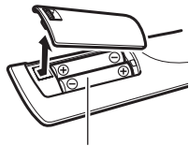

Batteries (AA/R6)

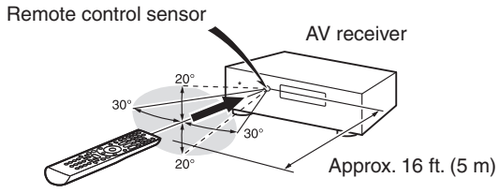

Note

Before connecting the power cord, connect all of your speakers and AV components.

1. Connecting Your Speakers

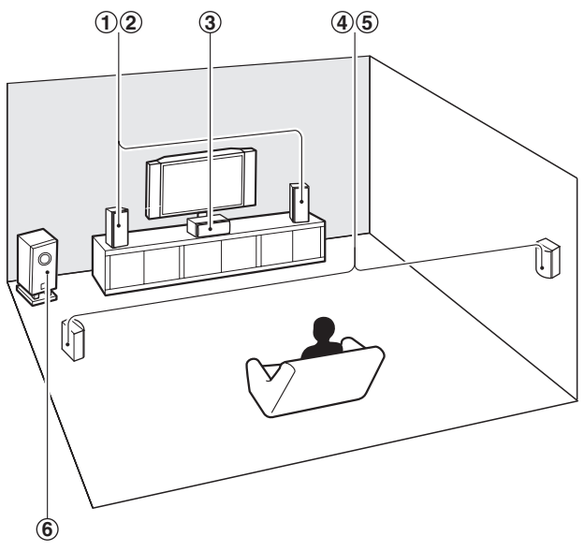

①② **Front speakers**
③ **Center speaker**
④⑤ **Surround speakers**
⑥ **Subwoofer**

Speaker Configuration

5.1-channel: ①②③④⑤⑥

Please connect ①, ②, ③, ④, ⑤ and ⑥ for 5.1-channel surround.

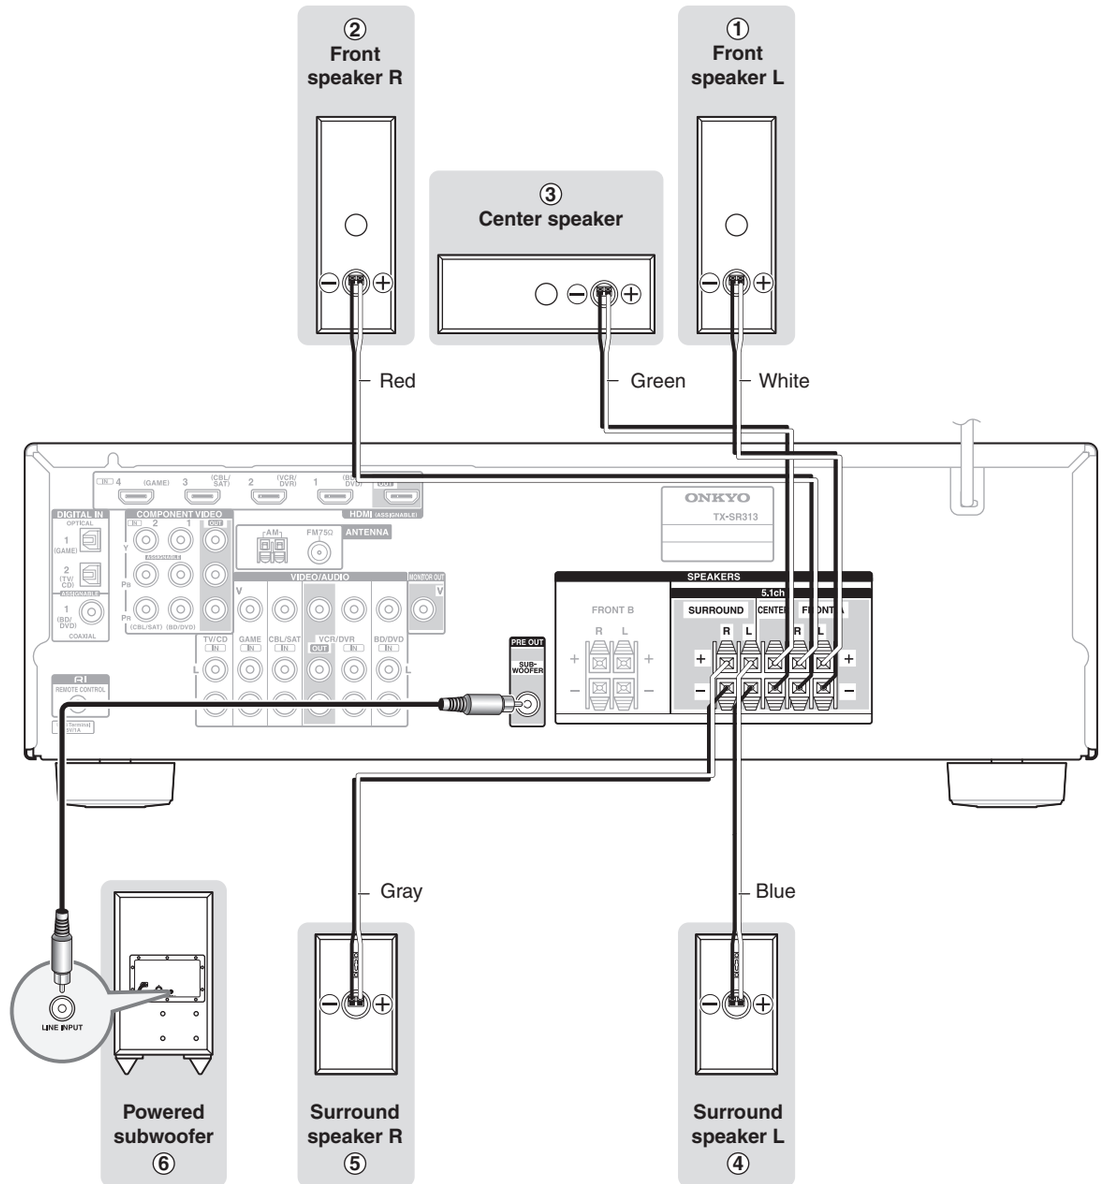

En

SN 29400982
(C) Copyright 2012 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved.

* 2 9 4 0 0 9 8 2 *

2. Connecting Your Components

Connecting Components with HDMI

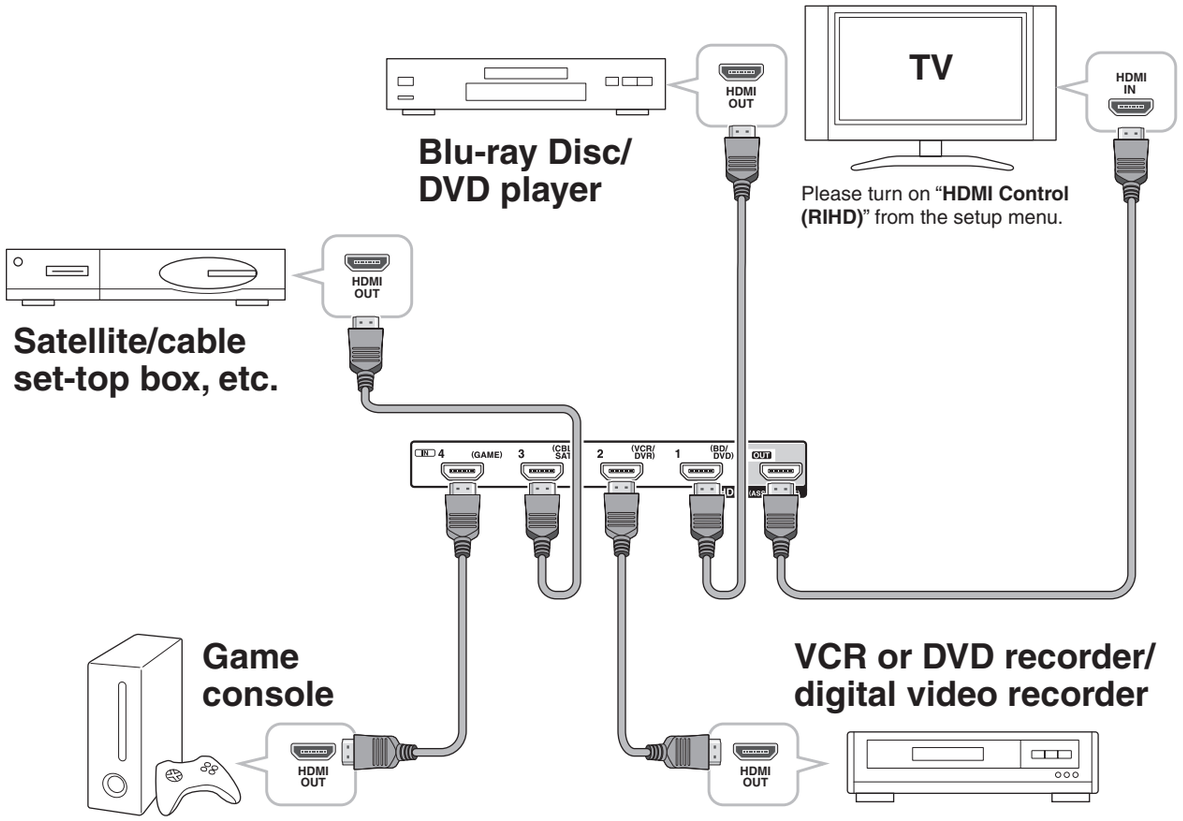

The components connected to each terminal (**BD/DVD**, **GAME**, etc.) can be selected with the input selector buttons of the same name on the front panel. Note that these default assignments can be changed. For details, please refer to the instruction manual.

■ Listening to TV audio (Optional)

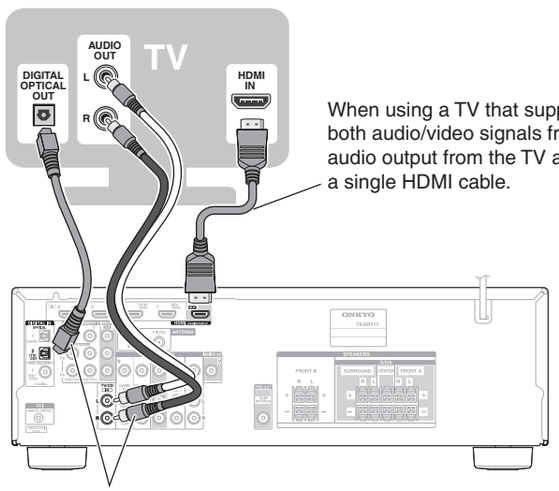

When using a TV that supports Audio Return Channel, both audio/video signals from the AV receiver and the audio output from the TV are carried bi-directionally on a single HDMI cable.

Choose an audio connection that matches your TV (without Audio Return Channel).

Connecting Components without HDMI

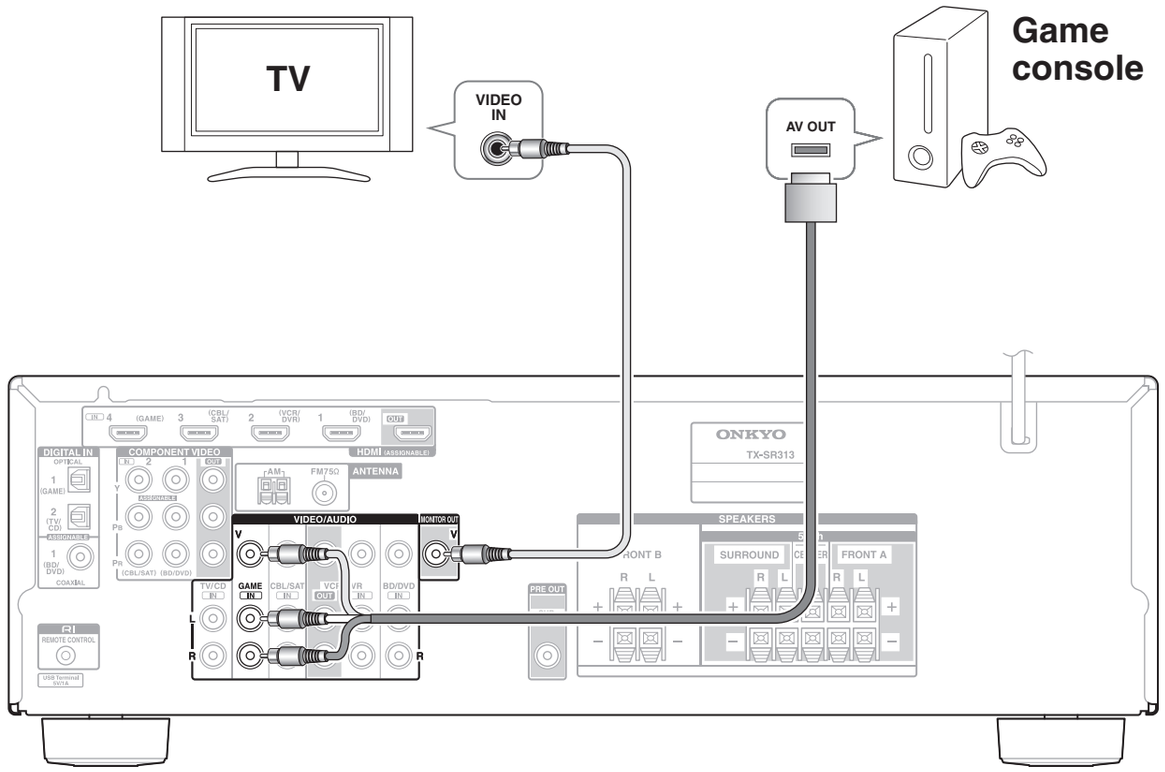

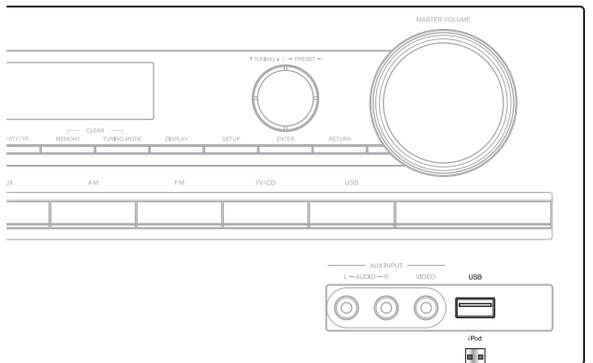

Portable player

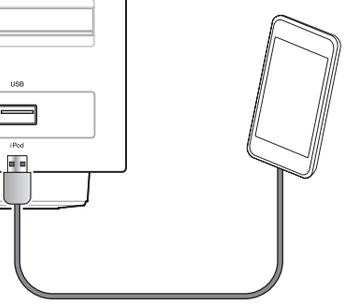

The content information is displayed (lists are displayed) on-screen, and you can control the contents while looking at the TV screen.

3. Turning On & Basic Operations

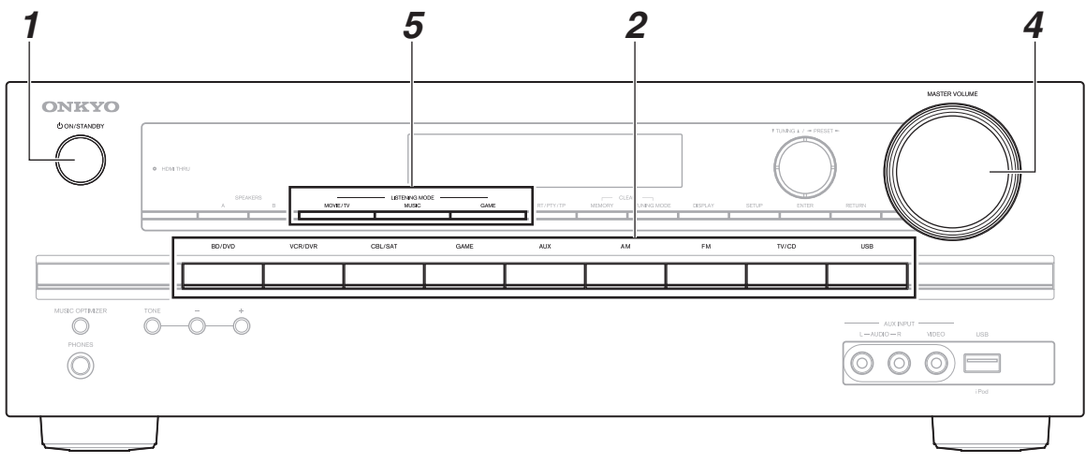

1 **Turn on the AV receiver.**

2 **Select the input source.**

3 **Start playback on the source component.**

4 **Adjust the volume.**

5 **Select a listening mode and enjoy!**

4. Using the Setup User Interface

The on-screen menus appear only on a TV that is connected to the **HDMI OUT**. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.

Tip

• If the menu doesn't appear, make sure the appropriate external input is selected on your TV.

Home Menu

The Home menu provides you quick access to frequently used menus. This menu enables you to change settings and view the current information.

■ Opening the Home menu

1 RECEIVER ► ***2*** HOME



■ Navigating through the menus

▸ **Input**

You can select the input source while viewing the related information.

▸ **Audio**

You can change various audio settings such as tone controls, the subwoofer and center channel levels.

▸ **Info**

You can view various information about the currently selected input source.

▸ **Listening Mode**

You can select the listening modes that are grouped in categories.

■ Closing the menu

HOME

Setup Menu

The Setup menu provides extended setup that includes settings for advanced users. All the settings are organized in a user-friendly structure, which covers the whole TV screen area.

■ Opening the Setup menu

1 RECEIVER ► ***2*** SETUP

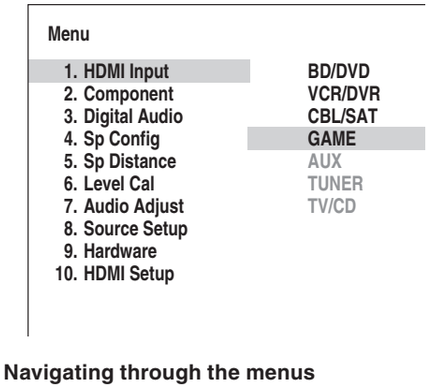

■ Navigating through the menus

■ Returning to the main menu

■ Closing the menu

Note

• This procedure can also be performed on the AV receiver by using **SETUP**, the cursor buttons, and **ENTER**.

5. Getting to Know the AV receiver

Front Panel

(North American and Taiwanese models)

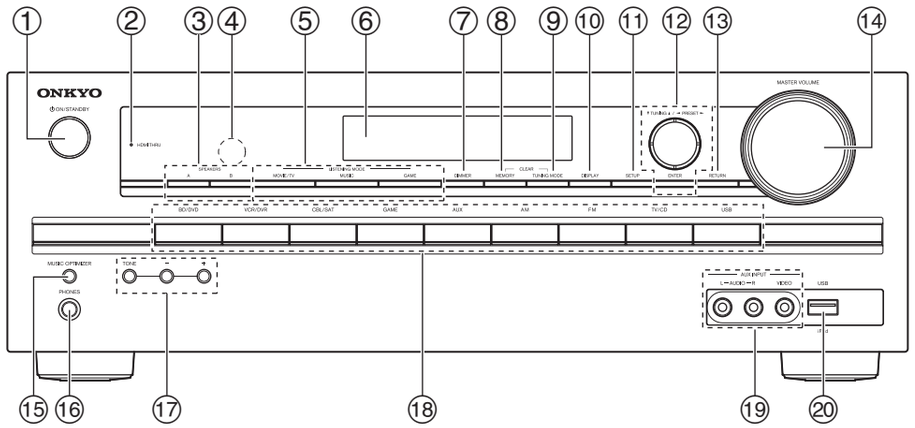

(European, Australian and Asian models)

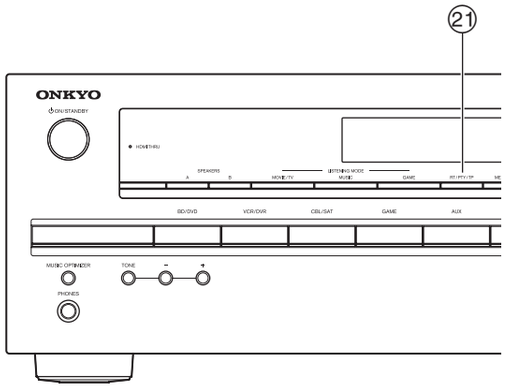

Each input selector button (**BD/DVD**, **GAME**, etc.) selects the input terminal with the same name on the rear panel.
Note that these default assignments can be changed. For details, please refer to the instruction manual.

① Sets the AV receiver to On or Standby.
② Lights when the HDMI through function is enabled.
③ You can use two sets of front speakers with the AV receiver: **Speakers A** for up to 5.1-channel playback in your main listening room and **Speakers B** for 2-channel stereo playback in another room.
④ The remote control sensor receives signals from the remote controller.
⑤ Selects listening modes.
⑥ Displays various information.
⑦ **(North American and Taiwanese models)**
DIMMER: Adjusts the display brightness.
⑧ Stores or deletes radio presets.
⑨ Selects the Auto or Manual tuning mode.
⑩ Displays various information about the currently selected input source.
⑪ Accesses the setup menus.
⑫ When the AM or FM input source is selected, ▼ **TUNING** ▲ are used to tune the tuner, and ◄ **PRESET** ► are used to select radio presets.
When used with onscreen menus, they work as cursor buttons to select and set items. **ENTER** is also used with onscreen menus.
⑬ Returns to the previous menu.
⑭ Adjusts the volume.
⑮ The Music Optimizer function enhances the sound quality of compressed music files.
⑯ Connects a standard pair of stereo headphones.
⑰ Adjusts the tone.
⑱ Selects the input sources.
⑲ Connects a camcorder or similar for audio/video playback.
⑳ Connects a USB storage or portable player for playback of music files.
㉑ **(European, Australian and Asian models)**
RT/PTY/TP: Used for RDS (Radio Data System)
RDS works only in areas where RDS broadcasts are available.

Remote Controller

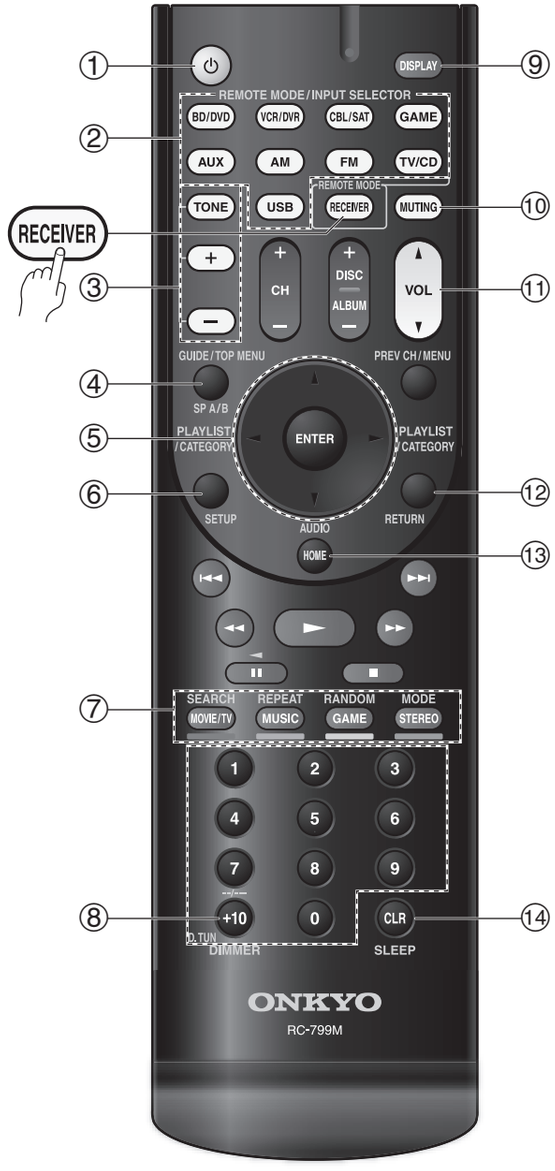

To control the AV receiver, press RECEIVER to select Receiver mode.

① Sets the AV receiver to On or Standby.
② Selects the remote controller modes or the input sources.
③ Adjust the bass and treble.
④ Selecting Speakers A and B.
⑤ Selects and adjusts settings.
⑥ Accesses the setup menus.
⑦ Selects listening modes.
⑧ Adjusts the display brightness.
⑨ Displays various information about the currently selected input source.
⑩ Mutes or unmutes the AV receiver.
⑪ Adjusts the volume.
⑫ Returns to the previous menu.
⑬ Accesses the HOME menu.
⑭ Used for the Sleep function.

6. Troubleshooting

Can't turn on the AV receiver.

Make sure that the power cord is properly plugged into the wall outlet.

The AV receiver turns off unexpectedly.

The AV receiver will automatically enter standby mode when Auto Standby is set and launched.

There's no sound, or it's very quiet.

Make sure that the proper digital source is selected.

There's no picture.

Make sure that all video connecting plugs are pushed in all the way.

If you can't resolve the issue yourself, try resetting the AV receiver before contacting your Onkyo dealer.
To reset the AV receiver to its factory defaults, turn it on and, while holding down **VCR/DVR**, press ⏻ **ON/STANDBY**. "**Clear**" will appear on the AV receiver's display and the AV receiver will enter standby mode.

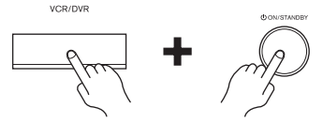

Note that resetting the AV receiver will delete your radio presets and custom settings.

ONKYO

ONKYO SOUND & VISION CORPORATION
Tel: 072-831-8023
http://www.onkyo.com/

ONKYO U.S.A. CORPORATION
Tel: 800-229-1687, 201-785-2600
http://www.us.onkyo.com/

ONKYO EUROPE ELECTRONICS GmbH
Tel: +49-8142-4401-0
http://www.eu.onkyo.com/

ONKYO EUROPE ELECTRONICS GmbH (UK BRANCH)
Tel: +44-(0)1628-473-350

ONKYO CHINA LIMITED
Tel: 852-2429-3118
http://www.onkyochina.com/

ONKYO CHINA PRC
Tel: 86-21-52131366
http://www.cn.onkyo.com/